

GULF COAST FANS, INC.
Fan Speed Wall Control Installation Instructions
(Model No. 623)

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL THIS ELECTRICAL DEVICE.

Installation of this control requires that a three-conductor cable with ground wire be run between the control wall box and the ceiling fan outlet box.

WARNING

TO AVOID FIRE, SHOCK AND SERIOUS PERSONAL INJURY, FOLLOW THESE INSTRUCTIONS.

1. READ YOUR OWNER'S MANUAL CAREFULLY. RETAIN OWNER'S MANUAL FOR FUTURE REFERENCE.
2. TO AVOID POSSIBLE ELECTRICAL SHOCK, BE SURE ELECTRICITY IS TURNED OFF AT THE FUSE BOX OR CIRCUIT BREAKER PANEL BEFORE INSTALLING THE WALL CONTROL.
3. DO NOT INSTALL WALL CONTROL NEAR HEAT PRODUCING EQUIPMENT.
4. ALL WIRING MUST CONFORM TO NATIONAL AND LOCAL ELECTRICAL CODES. IF YOU FEEL YOU DO NOT HAVE ENOUGH ELECTRICAL KNOWLEDGE, HAVE A LICENSED ELECTRICIAN INSTALL THE CONTROL.
5. USE OF THIS CONTROL WITH SOME CEILING FANS COULD RESULT IN FIRE, SHOCK AND SERIOUS PERSONAL INJURY. USE THIS SPEED CONTROL ONLY WITH CAPACITOR SPEED CONTROLLED CEILING FANS.

General Instructions

 
This fan speed wall control is rated for 2 amps at 120volts. It is designed to control 2 of ceiling fans operation.

To connect more than one fan to this wall control, your ceiling outlet boxes must be wired to one central wall outlet. Additional wiring may needed make these connections. We suggest that you call a licensed electrician if you need to control more than one fan. To avoid erratic speeds and possible damage to your fan, use this control only with the fan pull chain switch set to its highest speed setting.

Installation

Electric connections should be in accordance with the national electrical codes and all local codes. Before starting , disconnect power to the circuit at the fuse box or circuit breaker box.

1. Disconnect the power and remove the existing wall plate and switch. (Figure 1)
2. Set the fan speed wall control in the OFF position (Switch is in down position).

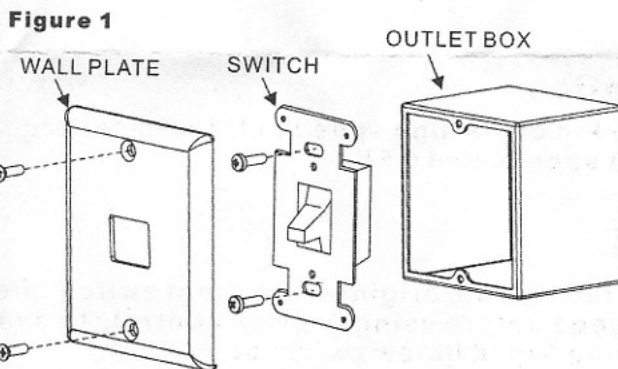

3. Make wire connections and secure them with wire nuts supplied as follows:

(REFER TO Figure 2)

*Connect the one of the black wires from all control to the black (hot) wire in outlet that comes from the household power supply (top wire)


*Connect the other black wire from the wall control to the other black wire (bottom wire).

This wire goes up to the ceiling's outlet box where your fan is installed.

*Use wire nuts (supplied) to secure the electrical connections.

*Wire the fan according to instructions in the ceiling fan's Installation Instruction.

 Figure 2

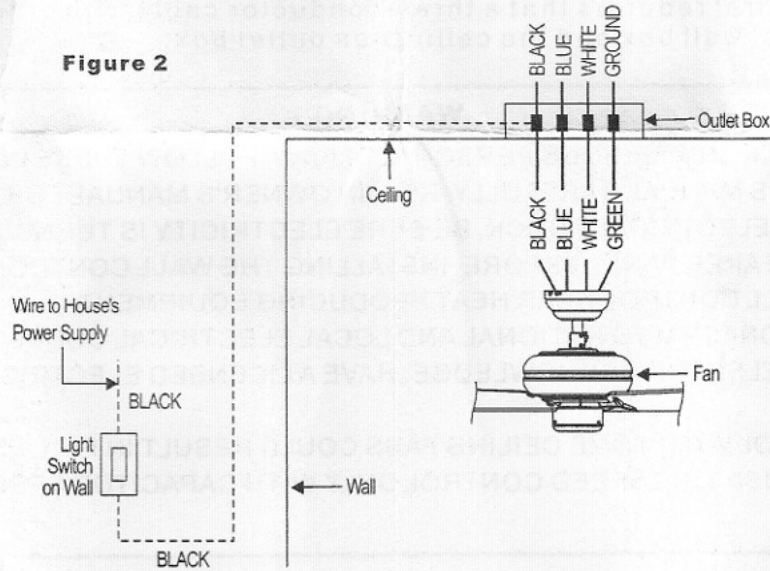

4. (Figure 3) Attach the Speed Wall Control to the outlet (wall) box and secure with 2 outlet box screws.

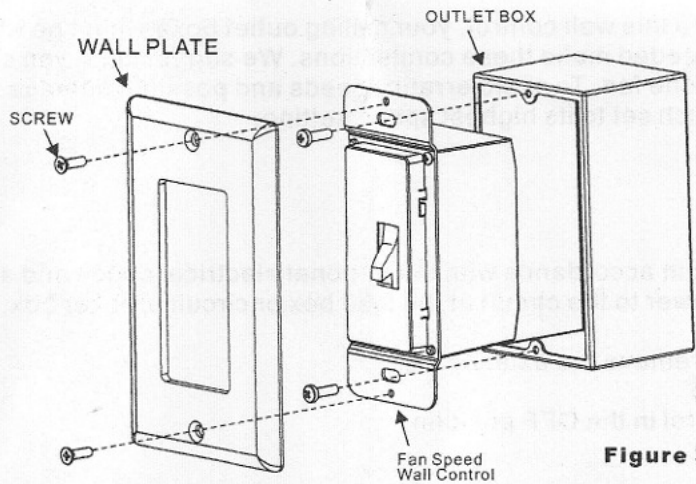 


Figure 3

Operation

Set the fan on its high speed pull chain setting. Then use your wall control to select any of the 3 speeds and OFF.

NOTE

If your fan has the original pull chain switch, please always have the fan switch set to high speed before using the wall control. To avoid accidental pull chain use, shorten chain by cutting 1 inch below switch body.